

TOWER

OVER 100 YEARS of quality

CAVALETTO

HANDHELD BLENDER

T12059

Applicable to
all colour variants

**POWERFUL
600W
MOTOR**

**SOFTTEX™
NON-SLIP
SOFT TOUCH
COATING**

**DURABLE
LONG-LIFE
STAINLESS
STEEL
BLADES**

**TURBO
BUTTON
FOR EXTRA
POWER
BOOST**

3*
YEAR
GUARANTEE

Call us first, we can help.

With advice, spares and returns.

Visit our website: towerhousewares.co.uk **Call: +44 (0)333 220 6066**
(8.30am to 6.00pm Monday-Friday)



**SAFETY AND
INSTRUCTION
MANUAL**

**PLEASE
READ
CAREFULLY**

*Subject to registering your
Extended Guarantee online at
www.towerhousewares.co.uk

Specifications:

This box contains:

Instruction Manual
Stick Blender

1. 2 Speed Power Switch
2. Turbo Button
3. Power Handle
4. Removable Blender Shaft
5. Blade and Guard



Technical Data:

Description:	Hand Blender
Model:	T12059 applicable to all colour variants
Rated Voltage:	220-240V~
Frequency:	50-60Hz
Power consumption:	600W



DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeiireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



Important Safety Information:

Please read these notes carefully BEFORE using your Tower appliance


- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- Please ensure that the appliance is used on a stable, level, and heat resistant surface.
- DO NOT immerse cords, plugs or any part of the appliance in water or any other liquid.
- DO NOT leave the appliance unattended while it is operating.
- Close supervision is necessary when any appliance is used by or near children or pets.
- This appliance can be used by children aged 16 years and above, as well as persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should not play with the appliance.
- Cleaning and user maintenance should not be made by children without supervision.

- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer or its service agent or a similarly qualified person.
- DO NOT let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- The use of attachments is not recommended by the appliance manufacturer apart from those supplied with this product.
- DO NOT pull the plug out by the cord as this may damage the plug and/or the cable.
- DO NOT use this product for anything other than its intended use.
- This appliance is for household use only.
- DO NOT carry the appliance by the power cord.
- DO NOT use any extension cord with this appliance.
- DO NOT use the appliance outdoors.
- Switch off and unplug before fitting or removing tools/ attachments, after use and before cleaning.
- Avoid contact with moving parts. Keep hands, hair, clothing and utensils away from the blades whilst operating to prevent personal injury or damage to the appliance. DO NOT allow the blades to face the body during operation. CAUTION! The blade is sharp. Handle with care.
- Never let the power unit, cord or plug get wet.
- CAUTION! Take care when handling the sharp cutting blades and during cleaning.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type

environments; bed and breakfast type environments.

- DO NOT operate the appliance with wet hands.
- Take special care when preparing food for babies, the elderly and infirm.
- Always ensure that the blender is thoroughly sterilized.
- Never blend or mix hot oil or fat. Please follow the processing guide.
- Never let anybody trip over the power cord and attached cable. DO NOT let the cord touch hot surfaces or hang down where a child could grab it.
- Never add ingredients to the mixing bowl while the machine is operating.
- DO NOT operate the appliance continuously. Operating beyond the recommended period may cause the motor to overheat. If the surface of the appliance becomes very hot, it may need time to cool down. The continuous operating time must be less than 30 seconds. Allow the appliance to rest for at least 2 minutes between cycles. After operating 5 cycles continuously, allow the appliance to cool down to room temperature before restarting.
- The blender should be run for no longer than 15 seconds without a load.
- DO NOT use the appliance to blend ingredients that may be too hard for the motor and blades.
- DO NOT use the appliance in direct sunlight or near heating appliances (heaters, stoves, ovens etc.).
- This appliance must be used ONLY according to the instructions.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the Customer Support Team.

Wiring Safety for UK Use Only

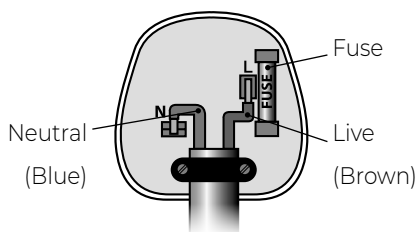


IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue neutral [N] Brown live [L]

Plug Fitting Details (Where Applicable).

The wire coloured blue is the neutral and must be connected to the terminal marked [N] or coloured black. The wire coloured brown is the live wire and must be connected to the terminal marked [L] or coloured red. On no account must either the brown or the blue wire be connected to the [EARTH] terminal .

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-Rewireable Mains Plug.

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug – disconnect it from the mains – and then cut it off of the mains lead and immediately dispose of it in a safe manner. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

WARNING:

This appliance is double insulated.
Do not connect any wire to the earth terminal.

Before First Use:

Read all instructions and safety information carefully before first use. Please retain this information for future reference.

1. Remove your appliance from the packaging.
2. Before using the appliance for the first time, carefully clean the blender shaft.
3. DO NOT use any aggressive detergents, brushes with metal or nylon bristles or sharp objects for cleaning the unit.
4. Your appliance is now ready for normal use.
5. Dispose of the packaging in a responsible manner.

Using Your Appliance:

1. Fit the power handle inside the blender shaft; turn clockwise until there is an audible click, confirming the shaft is locked in to position. The lock symbol on the power handle and the arrow on the blender shaft should be aligned.
2. Connect the unit to the mains socket.
3. Press and hold the power switch button to turn the blender on. Alternatively press and hold the Turbo button.
4. Immerse the blade completely into the ingredients to be blended.
5. Blend the ingredients by moving the appliance slowly up and down and in a circular motion. **WARNING! DO NOT** blend continuously for more than 30 seconds.
6. Once blending is complete, release the power switch or Turbo button.
7. Switch off at the socket and unplug.

▲ CAUTION: If the blender becomes blocked, release the power/Turbo switch, switch off at the wall socket and unplug before clearing the blades.

Preparation Guide:

Food	Max. quantity	Speed	Max. time
Soups, Milk Vegetables, Mayonnaise Sauces, Strawberry	200g	Lower speed	30 seconds
Carrot pieces (size 15mm x 15mm x 15mm)	500g Note: 200g carrot pieces per 300g water	Higher speed	30 seconds

Troubleshooting:

Questions	Answers
The mixture splashes up when I blend	This can happen due to the powerful blades of the stick blender. Place the end of the blender shaft into your mixture before turning it on, to minimise splash. Use a larger or deeper bowl or jug.
My mixture is not blending	Chop your ingredients into smaller pieces.
How long can I use the blender for before it needs to rest?	Do not exceed 30 seconds continuous running time. Allow the appliance to cool down before restarting.
Can I use the stick blender to crush ice?	Do not use the blender to crush ice as this can blunt the blades.

Cleaning & Care:

1. Unplug the appliance and put the motor unit to one side.
2. The bowl, blades and lid can all be washed in warm, soapy water.

▲ CAUTION: Take care when cleaning the blades as they are extremely sharp.

3. Wipe the power handle and cord with a damp cloth.
4. DO NOT immerse the power handle in water.
5. Make sure that the appliance is cleaned after every use.
6. Allow to dry fully after cleaning before using again.

DO NOT use scouring pads, steel wool, any form of strong solvents or abrasive cleaning agents to clean the appliance; they may damage the outside surfaces of the appliance.

▲ CAUTION! DO NOT clean any part of the appliance in a dishwasher.

▲ WARNING:

DO NOT immerse any electrical part of the appliance in water such as motor units or plugs.
Please see cleaning section for further instructions.

To store your appliance:

1. Unplug the power cord from the power outlet and clean as above.
2. Allow the appliance to dry fully.
3. Assemble the appliance and store out of reach of children.

NOTES

NOTES

NOTES

TOWER[®]
over 100 YEARS of quality



CAVALETTO

thank you!

We hope you enjoy your appliance for many years.

This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials or workmanship, the faulty products must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

The Following Conditions Apply:

The product must be returned to the retailer with proof of purchase or a receipt. The product must be installed and used in accordance with the instructions contained in this instruction guide.

It must be used only for domestic purposes.

It does not cover wear and tear, damage, misuse or consumable parts. Tower has limited liability for incidental or consequential loss or damage.

This guarantee is valid in the UK and Eire only.

The standard one year guarantee is only extended to the maximum available for each particular product upon registration of the product within 28 days of purchase. If you do not register the product with us within the 28 day period, your product is guaranteed for 1 year only.

To validate your extended warranty, please visit www.towerhousewares.co.uk and register with us online.

Please note that length of extended warranty offered is dependent on product type and that each qualifying product needs to be registered individually in order to extend its warranty past the standard 1 year.

Extended warranty is only valid with proof of purchase or receipt.

Your warranty becomes void should you decide to use non Tower spare parts.

Spare parts can be purchased from www.towerhousewares.co.uk

Should you have a problem with your appliance, or need any spare parts, please call our Customer Support Team on:

+44 (0) 333 220 6066

